
Installation Guidelines - Sheffield Cycle Stand

These instructions are intended as guidelines only. Citysquared recommend employing experienced professionals for any installation.


1.0

The cycle stand is fitted by core drilling a hole for each leg. Ensure the product is positioned avoiding any under-floor services. Measure the distance to the centre point of each leg and mark out on the floor.

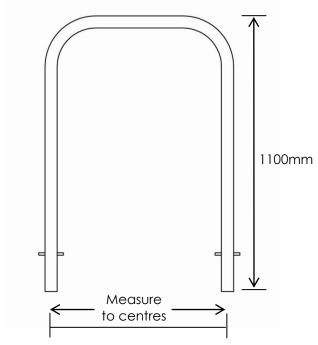

2.0

Using an appropriate diamond core drill (check diameter of legs), drill approximately 300mm into the hard surface to achieve a cycle stand height of around 800mm. Citysquared recommend an adjustable rig be used in conjunction with the drill to ensure the cycle stand remains perpendicular to level.

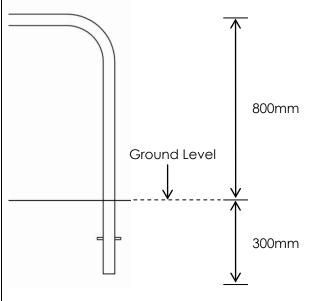

3.0

Ensure the hole is clear of waste material (or water if a wet drill is used).

Check the depth of each hole is adequate.

Using a polyester resin (e.g. Instarmac, Ultracrete PY5) bond the legs into the prepared hole. Observe the manufacturers application procedures and curing times. 4.0

Please note all installations need to be into a hardstanding.