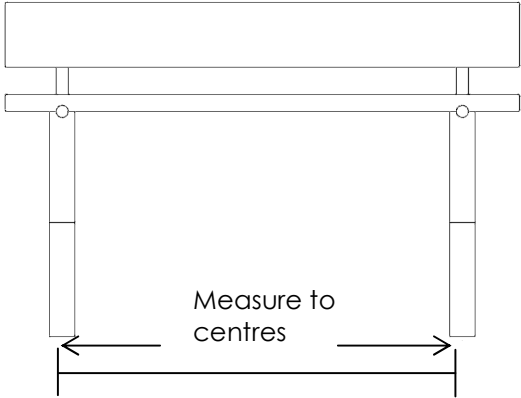
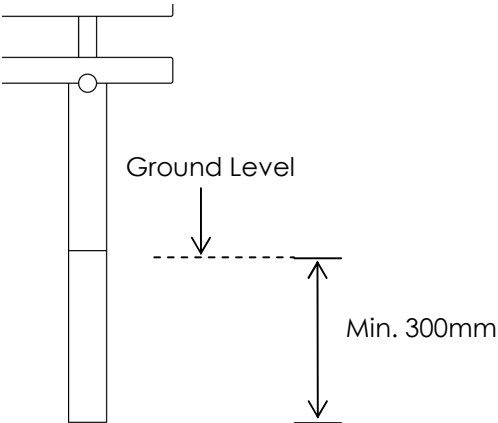
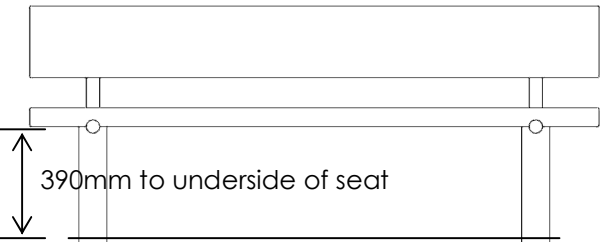


Installation Guidelines – Basic Bench

These instructions are intended as guidelines only. Citysquared recommend employing experienced professionals for any installation.

<p>1.0</p> <p>The bench is fitted by core drilling a hole for each leg. Ensure the product is positioned avoiding any under floor services. Measure the distance to the centre point of each leg (typically 1400mm) and mark out on the floor.</p> 	<p>2.0</p> <p>Using an appropriate diamond core drill (check diameter of legs), drill into the hard surface to achieve a seat height of around 450mm. Citysquared recommend an adjustable rig be used in conjunction with the drill ensure the bench leg remains perpendicular to level.</p> 
<p>3.0</p> <p>Ensure the hole is clear of waste material (or water if a wet drill is used). Check the depth of each hole is adequate. Using a polyester resin (e.g. Instarmac, Ultracrete PY5) bond the legs into the prepared hole. Observe the manufacturers application procedures and curing times.</p> 	<p>4.0</p> <p><i>Please note all installations need to be into a hardstanding. When installing into an uneven surface observe the approximate guidelines below.</i></p> 